

## Technical Note - TECH 204 - digital switch

Please be advised that when using the TECH 204 controller with a digital switch, it is necessary to update the controller firmware to the latest available version for automatic switching of the connected Petrol/Gas switch option. After updating, the controller will operate with support for the digital Petrol/Gas switch.

If using an older firmware version, you must run the GAS Setting program and update the firmware or select the "Settings" tab and there you should select the menu with three dots under "gas level sensor." (see Fig. 1).

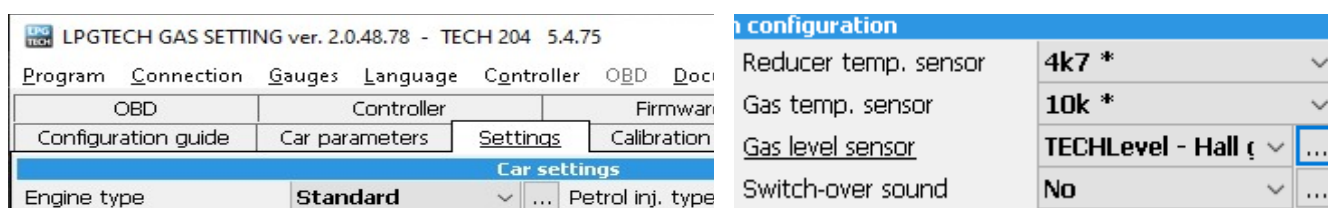


Fig. 1

Then, in the open window, select "Gas level sensor" (see Fig. 2).

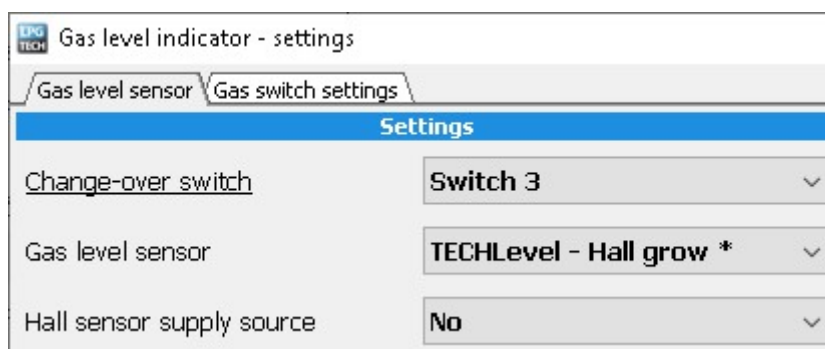


Fig. 2

On the tab, switch the "Change-over switch" to "Digital switch" (see Fig. 3).

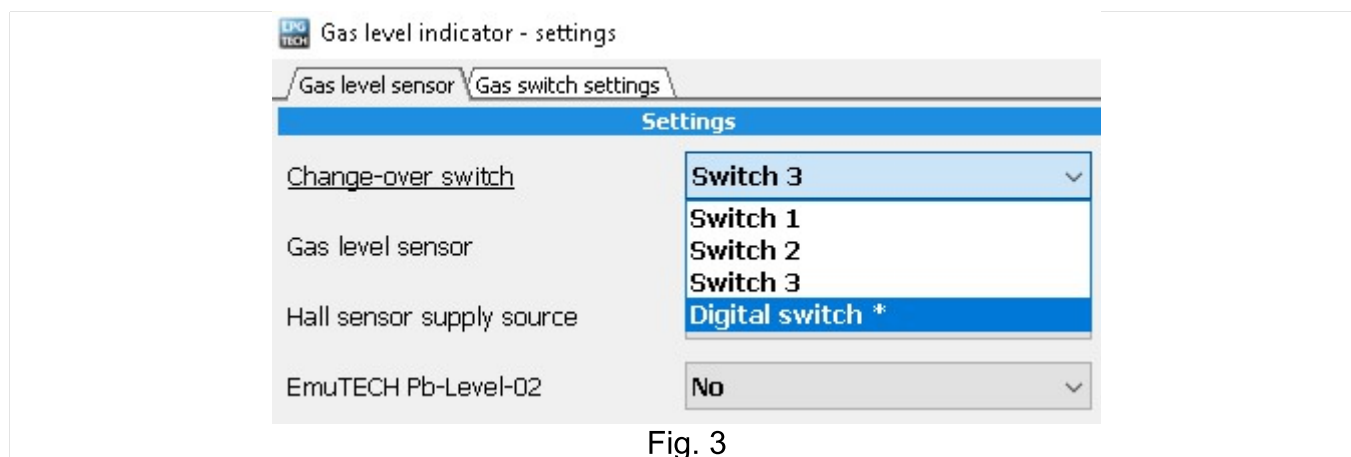


Fig. 3